


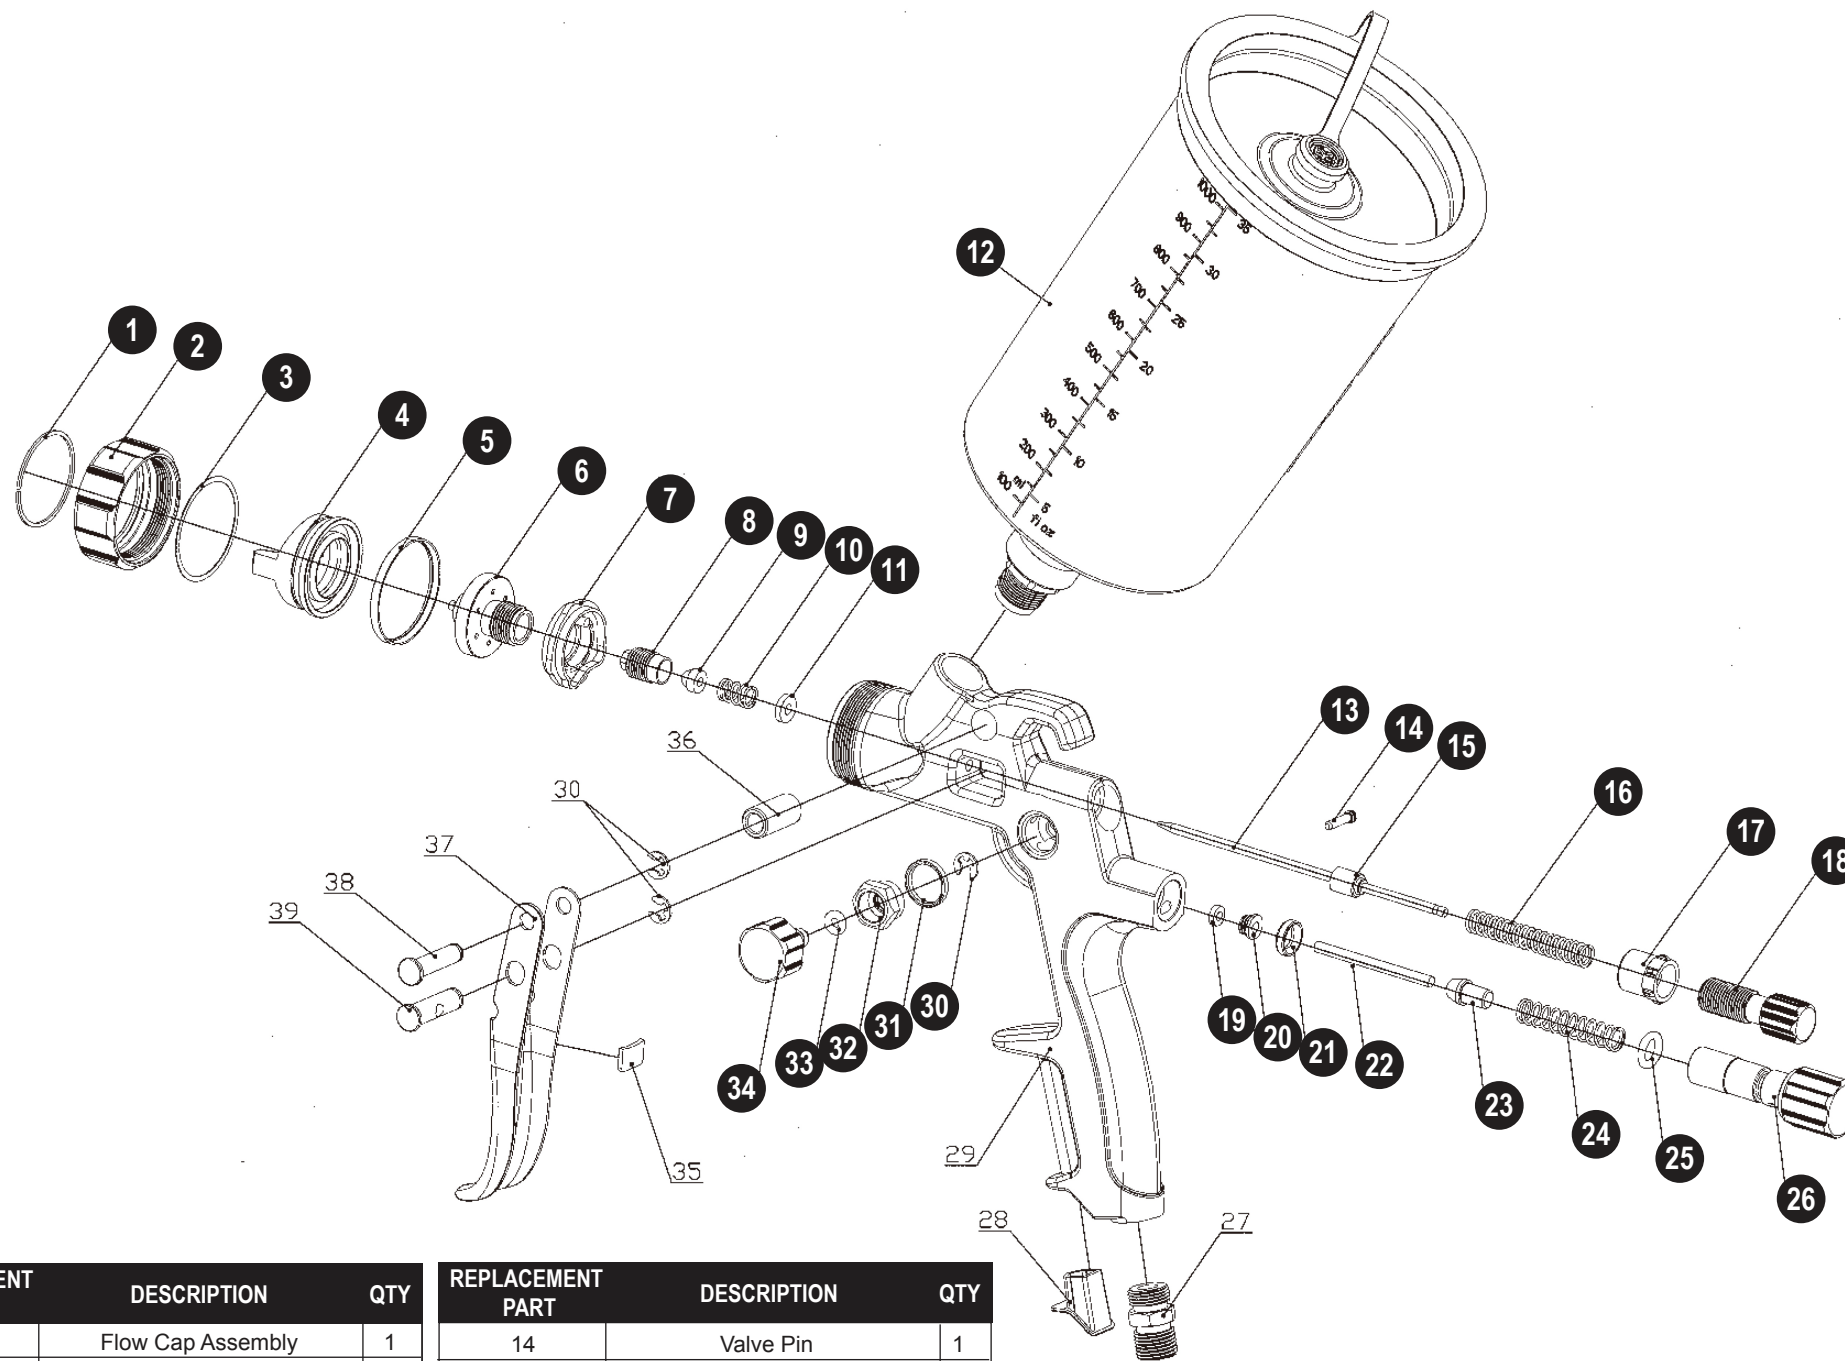

REPLACEMENT PART	DESCRIPTION	QTY
1,2,3,4,5	Flow Cap Assembly	1
6	Nozzle	1
7	Air Distribution Ring	1
8	Needle Guide Screw	1
9	Plastic Needle	1
10	Spring	1
11	Washer	1
12	Paint Cup	1
13,15,16	Paint Needle Assembly	1

REPLACEMENT PART	DESCRIPTION	QTY
14	Valve Pin	1
17	Needle Adjustment Cup	1
18	Fluid Control Knob	1
19	Air Flow Needle Plastic Seal	1
20	Seating Screw	1
21	Valve Insert	1
22,23,24	Valve Needle Assembly	1
25,26	Air Flow Control Know Assembly	1
30,31,32,33,34	Spray Pattern Control Knob Assembly	1

PART	Description	QTY
1	Flow Cap Retaining Ring	1
2	Flow Cap Lock Nut	1
3	Flow Cap Washer	1
4	Flow Cap	1
5	Flow Cap Seal	1
6	Nozzle	1
7	Air Distribution Ring	1
8	Needle Guide Screw	1
9	Plastic Needle	1
10	Spring	1
11	Washer	1
12	Paint Cup	1
13	Paint Needle	1
14	Valve Pin	1
15	Needle Holder	1
16	Needle Spring	1
17	Needle Adjustment Cap	1
18	Fluid Control Knob	1
19	Air Flow Needle Plastic Seal	1
20	Seating Screw	1
21	Valve Insert	1
22	Valve Needle	1
23	Plastic Valve Needle	1
24	Valve Spring	1
25	O-Ring	1
26	Air Flow Control Knob	1
27	Air Inlet	1
28	Plug	1
29	Gun Body	1
30A	E-Clip	1
30B	E-Clip	1
30C	E-Clip	1
31	Pattern Control Washer	1
32	Pattern Control Nut	1
33	Pattern Control O-Ring	1
34	Pattern Control Knob	1
35	Trigger Pad	1
36	Trigger Pin Holder	1
37	Trigger	1
38	Trigger Pin	1
39	Trigger Pin with Hole	1