


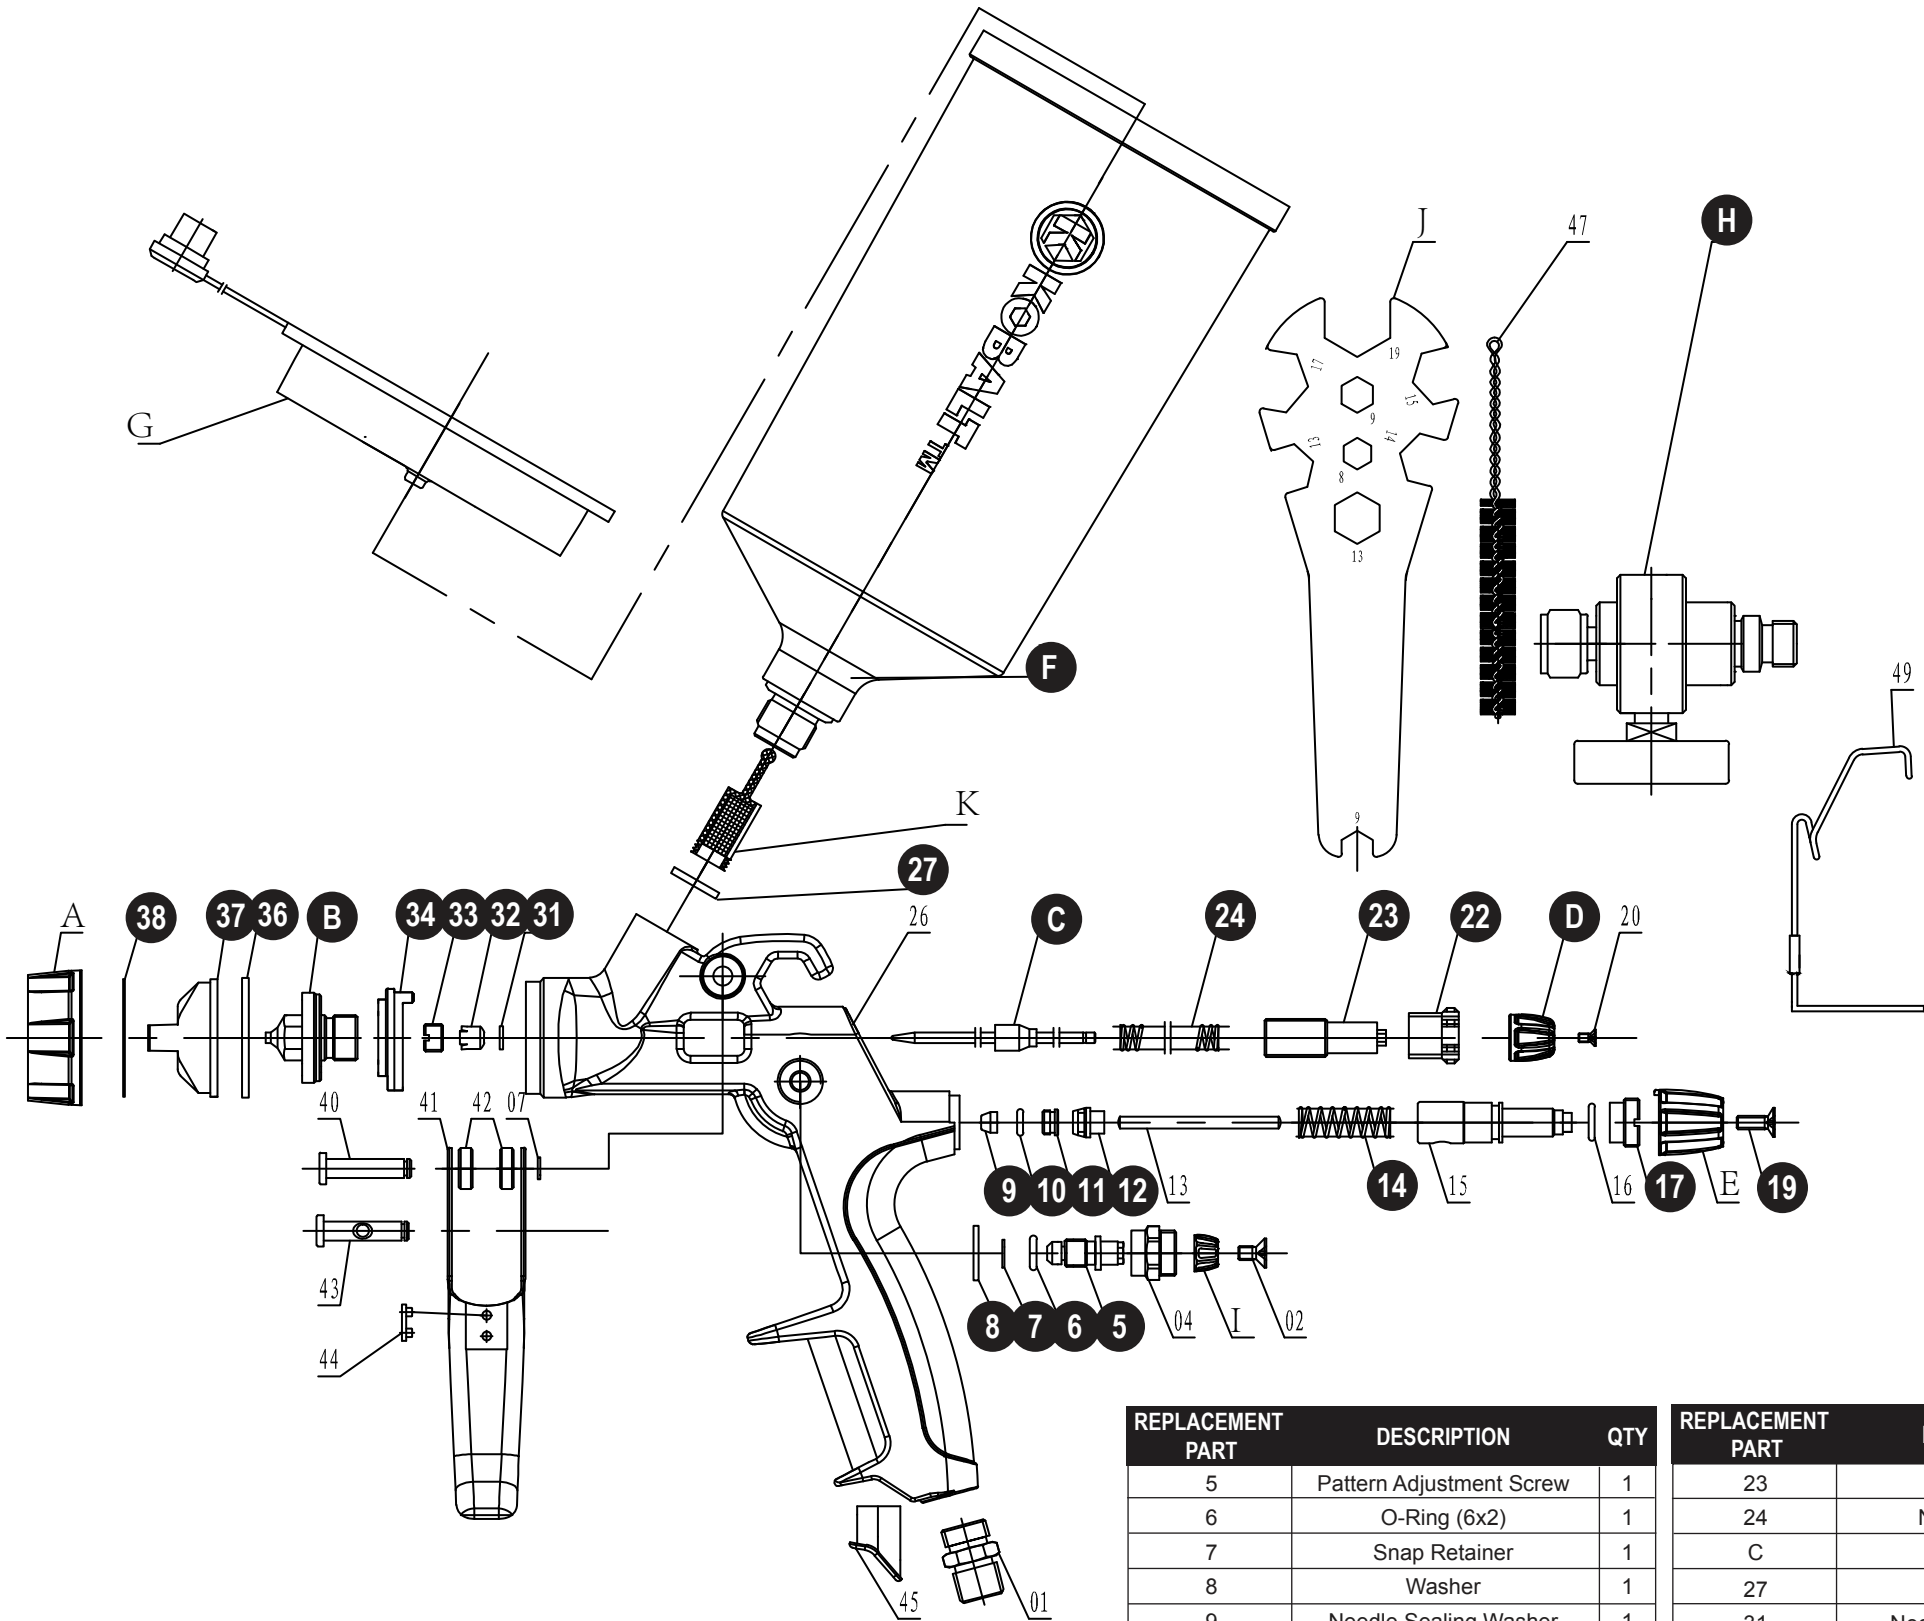

REPLACEMENT PART	DESCRIPTION	QTY
5	Pattern Adjustment Screw	1
6	O-Ring (6x2)	1
7	Snap Retainer	1
8	Washer	1
9	Needle Sealing Washer	1
10	O-Ring (3.85 x 1.8)	1
11	Direction Screw	1
12	Switch Bulkhead	1
14	Switch Spring	1
16	O-ring	1
17	Screw	1
19	Screw	1
D	Fluid Adjustment Knob	1
22	Lockout Fluid Control	1

REPLACEMENT PART	DESCRIPTION	QTY
23	Lockout	1
24	Needle Spring	1
C	Paint Needle	1
27	Washer	1
31	Needle Gasket Seal	1
32	Sealing Gasket	1
33	Needle Sealing Screw	1
34	Air Distribution Ring	1
B	Fluid Nozzle	1
36	Air Cap Washer	1
37	Air Cap	1
38	Air Nozzle Washer	1
H	Air Pressure Regulator	1
F	Paint Cup Set	1

Part No.	Description	Qty.
1	Air connection	1
2	Screw M4 x 7	1
I	Spray pattern adj. knob	1
4	Pattern Adj. Knob	1
5	Pattern Adjust Screw	1
6	O-ring 6 x 2	1
7	Snap Retainer	2
8	Washer	1
9	Needle sealing washer	1
10	O-ring 3.85 x 1.8	1
11	Direction Screw	1
12	Switch bulkhead	1
13	Air Valve Body	1
14	Switch Spring	1
15	Bushing	1
16	O-ring 6.8 x 1.6	1
17	Screw	1
E	Air adj. knob	1
19	Screw	1
20	Screw	1
D	Fluid adj.knob	1
22	Lockout fluid control	1
23	Lockout	1
24	Needle spring	1
C	Paint needle	1
26	Gun body	1
27	Washer	1
K	Paint filter	1
F	Paint Cup	1
G	Cup Lid	1
31	Needle gasket seal	1
32	Sealing gasket	1
33	Needle sealing screw	1
34	Air distribution ring	1
B	Fluid nozzle	1
36	Air cap washer	1
37	Air cap	1
38	Air nozzle washer	1
A	Air cap ring	1
40	Upper trigger pin	1
41	Trigger	1
42	Gasket	1
43	Lower trigger pin	1
44	Washer	2
45	End cap	1
J	Wrench	1
47	Brush	1
H	Air pressure regulator	1
49	Gun holder	1