


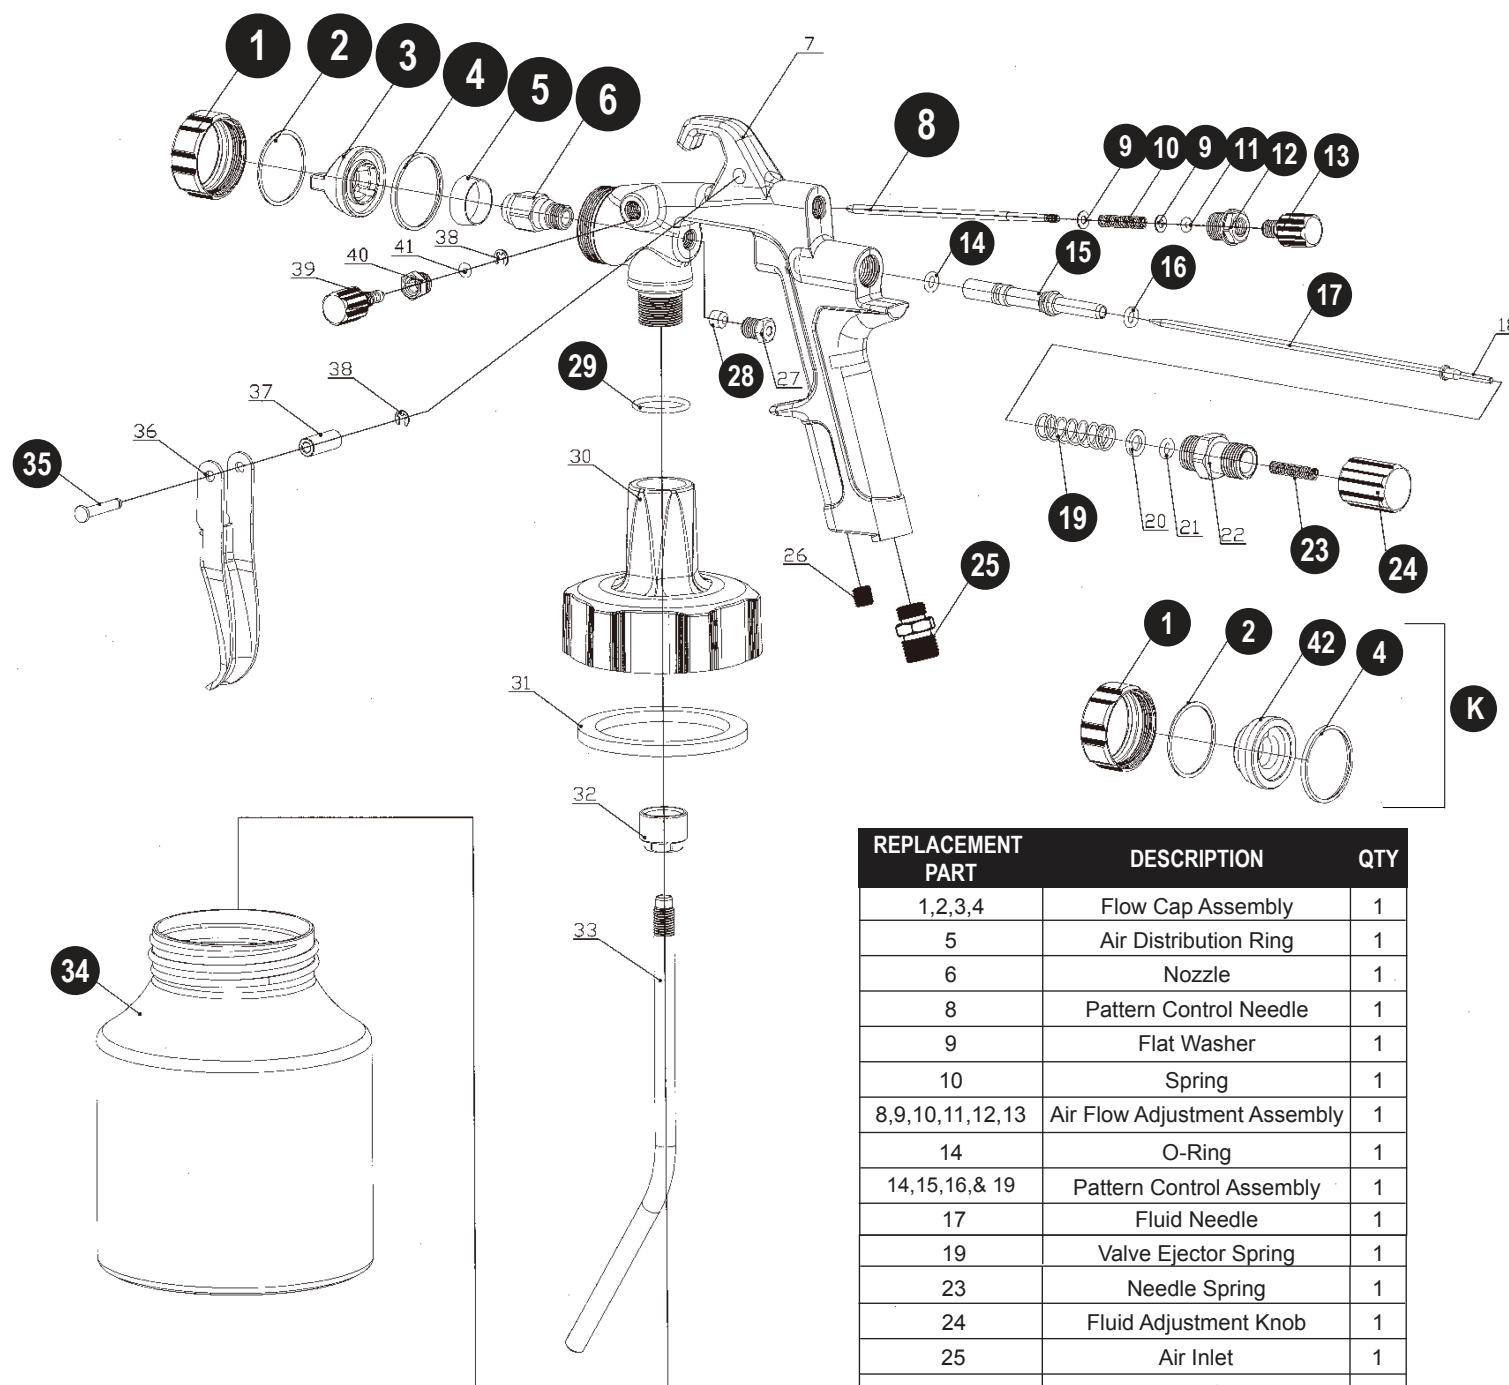

REPLACEMENT PART	DESCRIPTION	QTY
1,2,3,4	Flow Cap Assembly	1
5	Air Distribution Ring	1
6	Nozzle	1
8	Pattern Control Needle	1
9	Flat Washer	1
10	Spring	1
8,9,10,11,12,13	Air Flow Adjustment Assembly	1
14	O-Ring	1
14,15,16,& 19	Pattern Control Assembly	1
17	Fluid Needle	1
19	Valve Ejector Spring	1
23	Needle Spring	1
24	Fluid Adjustment Knob	1
25	Air Inlet	1
28	Plastic Seal	1
29	O-ring	1
34	Canister	1
35	Trigger Pin	1
K	Air Cap (Internal Mix) Assembly	1

PART	Description	QTY
1	Flow Cap Ring	1
2	Flow Cap Washer,	1
3	Flow Cap	1
4	Flow Cap Seal	1
5	Air Distribution Ring	1
6	Nozzle	1
7	Gun Body	1
8	Pattern Control Needle	1
9	Flat Washer x 2	1
10	Spring	1
11	O-ring	1
12	Nut	1
13	Pattern Control Knob	1
14	O-ring	1
15	Valve Ejector	1
16	O-ring x 3	1
17	Fluid Needle	1
18	Fluid Needle Holder	1
19	Valve Ejector Spring	1
22	Nut	1
23	Needle Spring	1
24	Fluid Adjustment Knob	1
25	Air Inlet	1
26	Hex Screw	1
27	Needle Fluid Screw	1
28	Plastic Seal	1
29	o-ring	1
30	Lid	1
31	Lid Gasket	1
32	Lid Lock Nut	1
33	Tube	1
34	Canister	1
35	Trigger Pin	1
36	Trigger	1
37	Trigger Pin Holder	1
38	E-Clip	1
39	Siphon/Pressure Knob	1
40	Nut	1
41	O-ring	1
42	E-Clip	1