


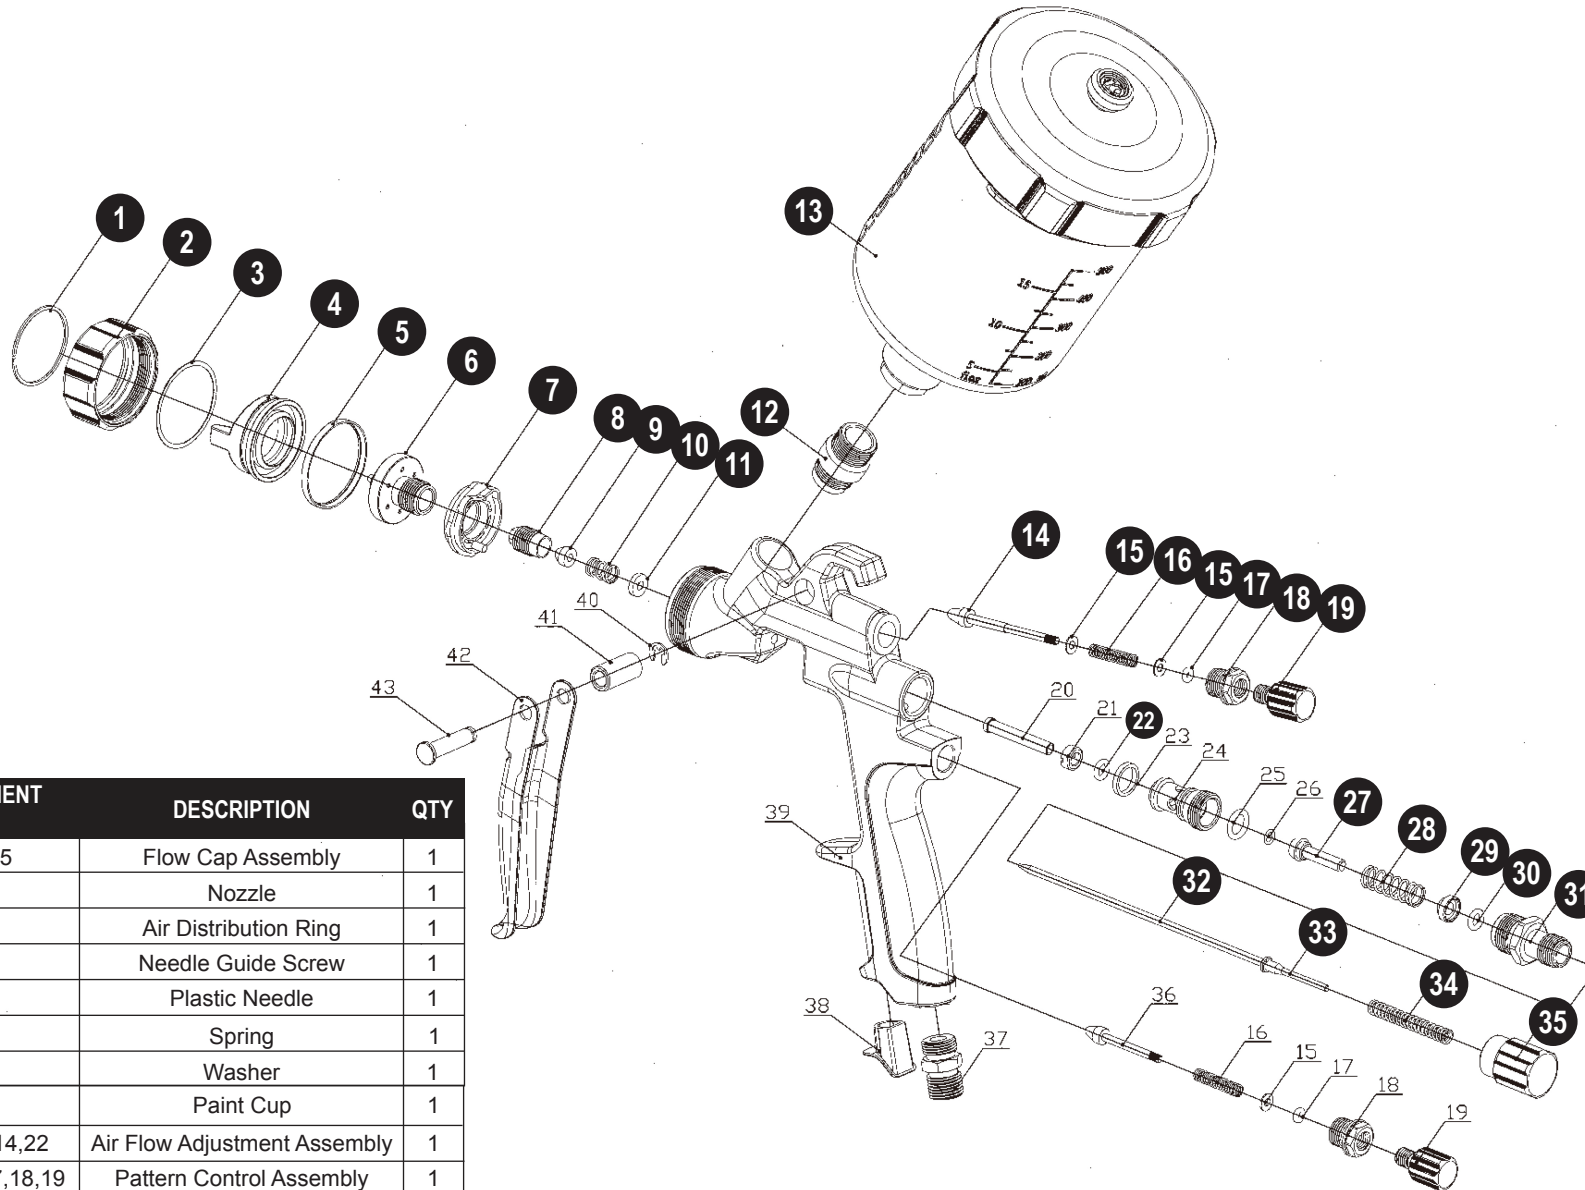

REPLACEMENT PART	DESCRIPTION	QTY
1,2,3,4,5	Flow Cap Assembly	1
6	Nozzle	1
7	Air Distribution Ring	1
8	Needle Guide Screw	1
9	Plastic Needle	1
10	Spring	1
11	Washer	1
13	Paint Cup	1
10,11,12,14,22	Air Flow Adjustment Assembly	1
14,15,16,17,18,19	Pattern Control Assembly	1
27,28,29,30	Valve Needle Assembly	1
31	Nut	1
32,33,34	Fluid Adjustment Assembly	1
35	Fluid Control Knob	1

PART	Description	QTY
1	Flow Cap Retaining Ring	1
2	Flow Cap Lock Nut	1
3	Flow Cap Washer	1
4	Flow Cap	1
5	Flow Cap Seal	1
6	Nozzle	1
7	Air Distribution Ring	1
8	Needle Guide Screw	1
9	Plastic Needle	1
10	Spring	1
11	Washer	1
12	Cup Connector	1
13	Paint Cup	1
14	Pattern Control Needle	1
15A	Washer x 2	1
15B	Washer x 2	1
16A	Spring	1
16B	Spring	1
17A	O-Ring	1
17B	O-Ring	1
18A	Nut	1
18B	Nut	1
19A	Pattern Control Knob	1
19B	Air Flow Knob	1
20	Valve Thimble	1
21	Valve Seating Screw	1
22	O-Ring	1
23	Valve Gasket	1
24	Valve Sleeve	1
25	O-Ring	1
26	O-Ring	1
27	Valve Needle	1
28	Valve Spring	1
29	Seating Ring	1
30	O-Ring	1
31	Nut	1
32	Fluid Adjustment Needle	1
33	Needle Holder	1
34	Needle Adjustment Spring	1
35	Fluid Control Knob	1
36	Air Flow Needle	1
37	Air Inlet	1
38	Plug	1
39	Gun Body	1
40	E-Clip	1
41	Trigger Pin Holder	1
42	Trigger	1
43	Trigger Pin	1