


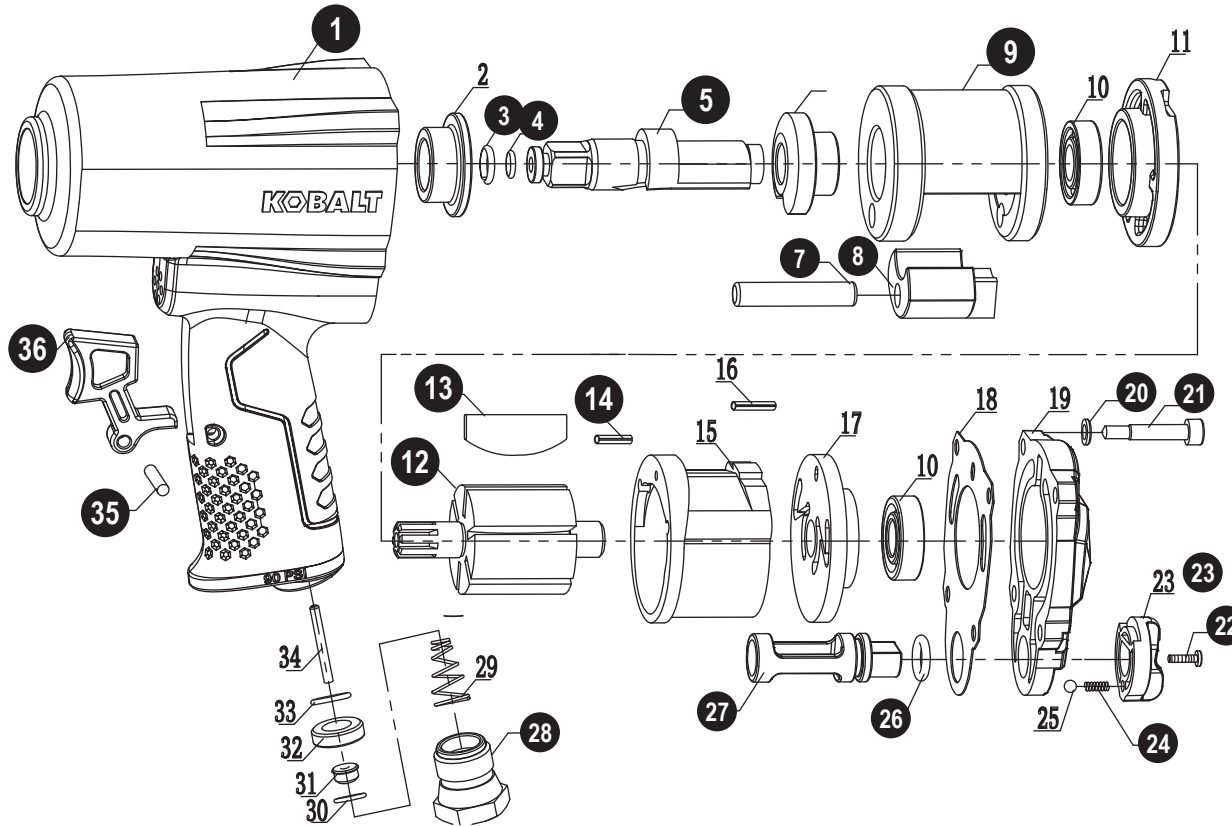

REPLACEMENT PART	DESCRIPTION	QTY	REPLACEMENT PART	DESCRIPTION	QTY
1	Housing	1	20	Spring Pads	4
3	Ring Friction	1	21	Bolts M5x20	4
4	O-Ring	1	22	Bolt M4x8	1
5	Anvil	1	23	Reversing Button	1
6	Cam	1	24	Spring	1
7	Hammer Pin	1	26	O-Ring	1
8	Hammer	1	27	Directional Valve	1
9	Hammer Cage	1	28	Air Inlet	1
12	Rotor	1	35	Pin	1
13	Rotor Blades	6	36	Trigger	1
14	Pin 3x8	1			

PART	DESCRIPTION	QTY
1	Housing	1
2	Anvil Bushing	1
3	Ring Friction	1
4	O-ring	1
5	Anvil	1
6	Cam	1
7	Hammer Pin	1
8	Hammer	1
9	Hammer Cage	1
10	Bearing 6001	2
11	Front Cover	1
12	Rotor	1
13	Rotor Blade	6
14	Pin 3 x 8	1
15	Cylinder	1
16	Pin 3 x 18	1
17	Rear Cover	1
18	Gasket	1
19	Closed Lid	1
20	Spring Pad	4
21	Bolt M5 x 20	4
22	Bolt M4 x 8	1
23	Reversing Button	1
24	Spring	1
25	Steel Ball	1
26	O-ring	1
27	Directional Valve	1
28	Air Inlet	1
29	Compressed Spring	1
30	O-ring	1
31	Intake Valve	1
32	Intake Valve Seat	1
33	O-ring	1
34	Stem	1
35	Pin	1
36	Trigger	1