


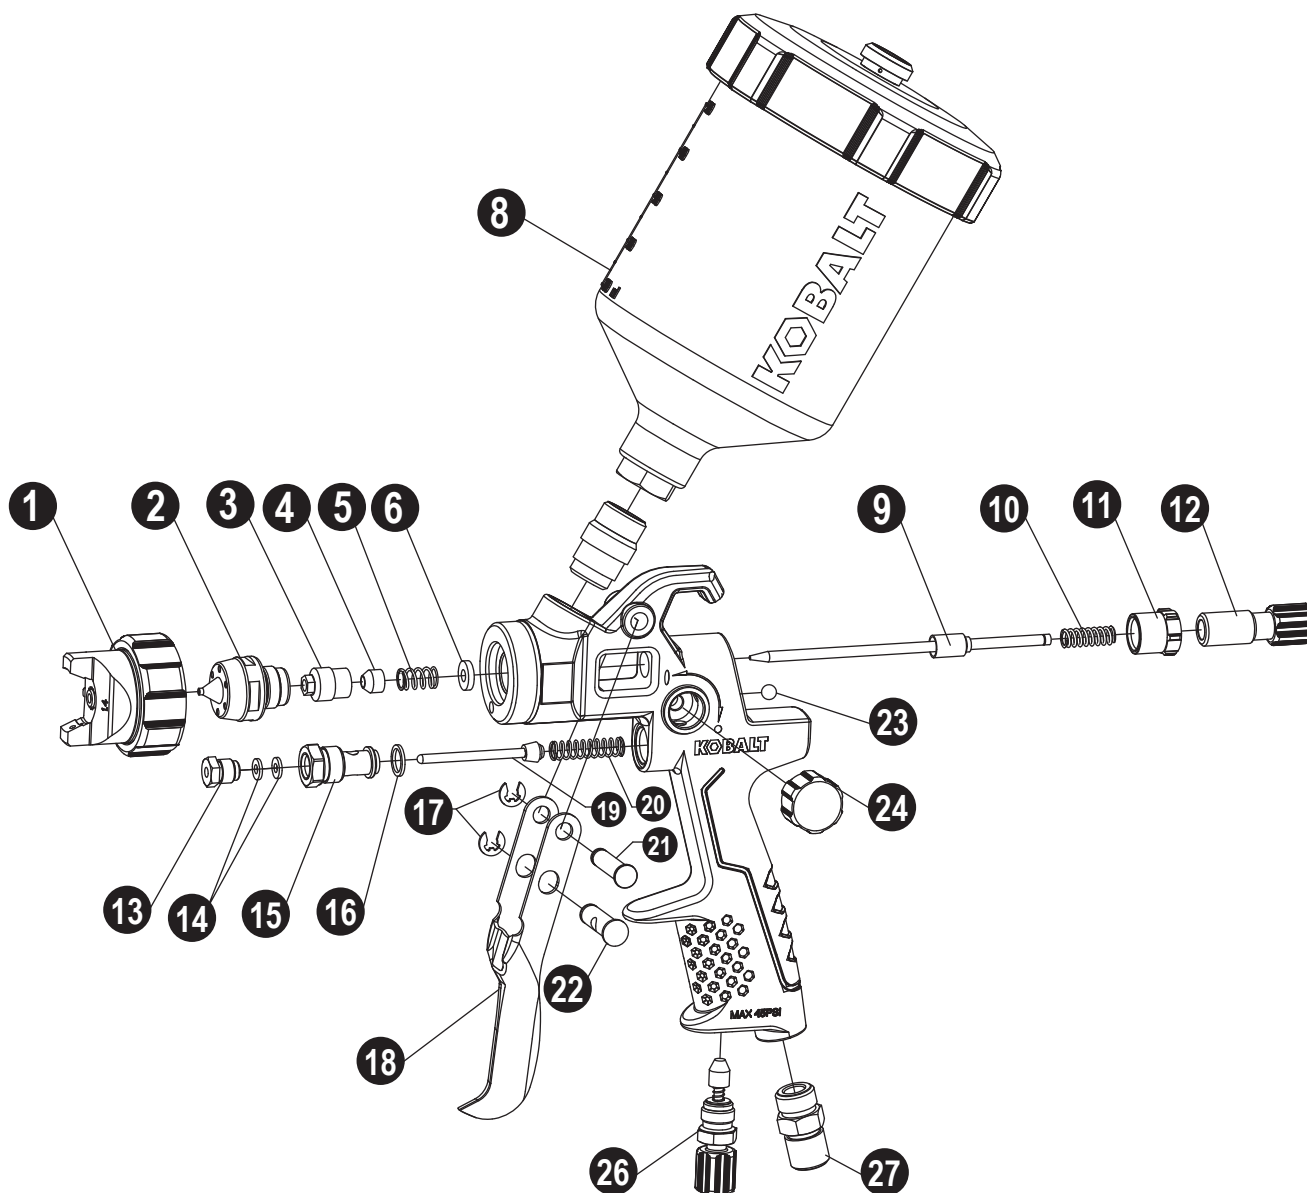

PART	DESCRIPTION	QTY
1	Air Cap Set	1
2	Nozzle	1
3	Packing Screw	1
4	Needle Packing	1
5	Compression Spring	1
6	Washer	1
8	Paint Cup Set	1
9	Needle Set	1
10	Paint Needle Spring	1
11	Paint Adjust Screw Seat	1
12	Paint Adjust Screw	1
13	Air Valve Packing Screw	1
14	Gasket	2

PART	DESCRIPTION	QTY
15	Air Piston Screw	1
16	Air Piston Washer	1
17	Circle Clip	2
18	Trigger	1
19	Air Piston Set	1
20	Air Piston Spring	1
21	Trigger Pin	1
22	Needle Pin	1
23	Steel Ball	1
24	Pattern Adjust Assembly	1
26	Air Adjustment Set	1
27	Air Connection Screw	1