


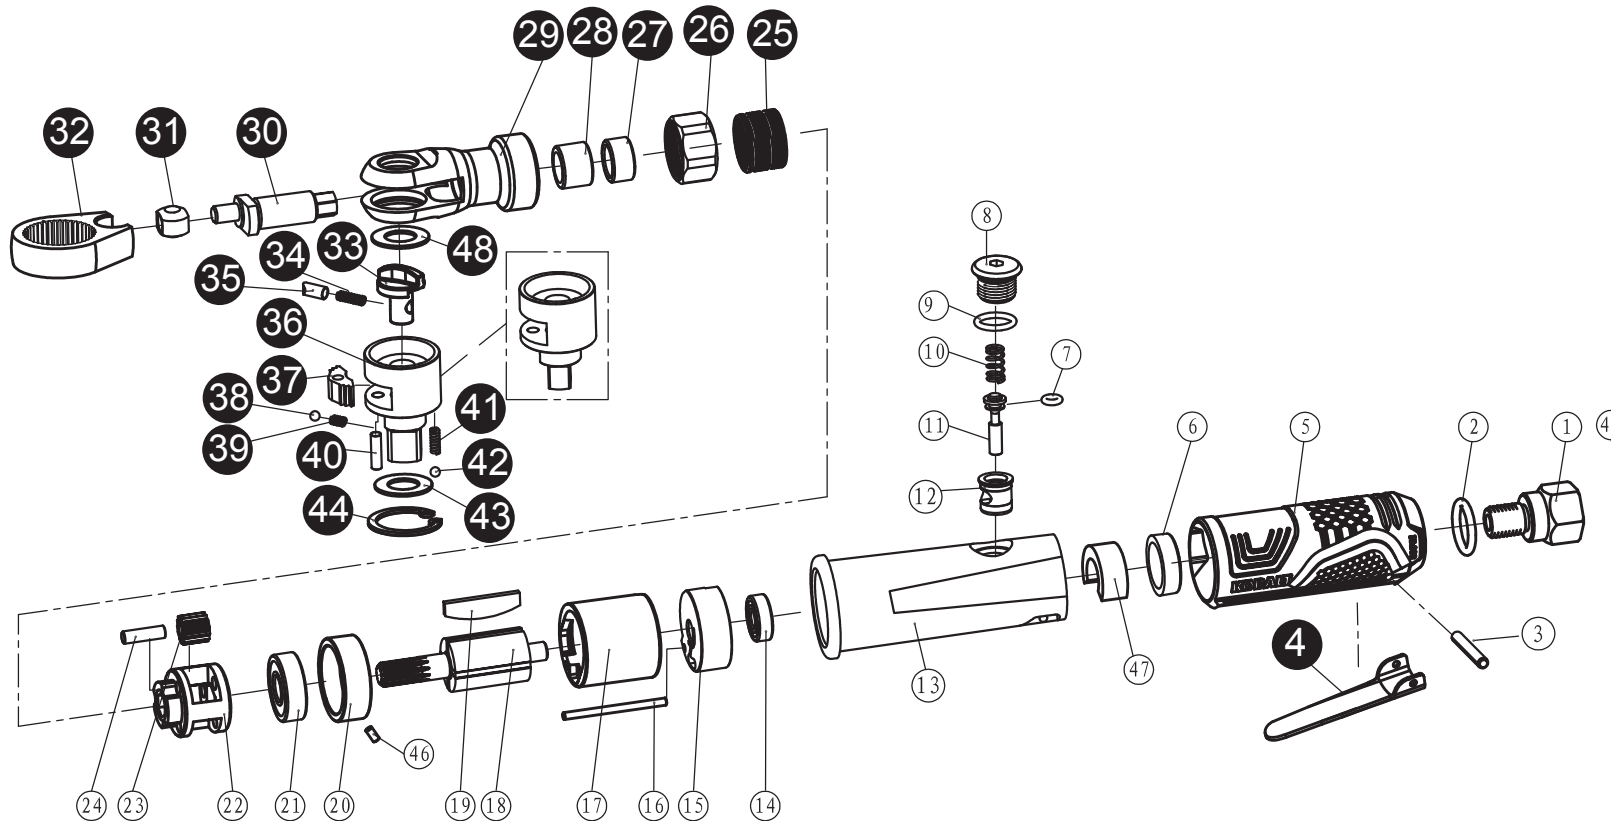

REPLACEMENT PART	DESCRIPTION	QTY
25,26,27,28,29,30,31,32,33,34,35, 36,37,38,39,40,41,42,43,44,48	Head Assembly	1
33,34,35,36,37,38, 39,40,41,42,43,44,48	Switch Pin Assembly	1
4	Lever	1

PART	Description	QTY
1	Air Inlet	1
2	O-ring	1
3	Spring Pin	1
4	Lever	1
5	Sleeve	1
6	Muffer	1
7	O-ring	1
8	Switch Nut	1
9	O-ring	1
10	Spring	1
11	Switch Pin	1
12	Switch Pin Sleeve	1
13	Housing	1
14	Bearing	1
15	B-cap	1
16	Alignment Pin	1
17	Cylinder	1
18	Rotor	1
19	Blades	4
20	A-cap	1
21	Bearing	1
22	Splinder Gears	1
23	Gear	3
24	Alignment Pin	3
25	Ring Gear	1
26	Connecting Nut	1
27	Bearing	1
28	Needle Bearing	1
29	Head Housing	1
30	Shaft	1
31	Shaft Pivot Nut	1
32	Ratchet Yoke	1
33	R/F Knob	1
34	Spring	1
35	Pin	1
36	Ratchet Head	1
37	Ratchet Pawl	1
38	Steel ball	1
39	spring	1
40	Pin	1
41	Spring	3
42	Steel Ball	3
43	Washer	1
44	Retainer Spring	1
45	Metal Filter	1
46	Pin	1
47	Muffer	1
48	Washer	1