



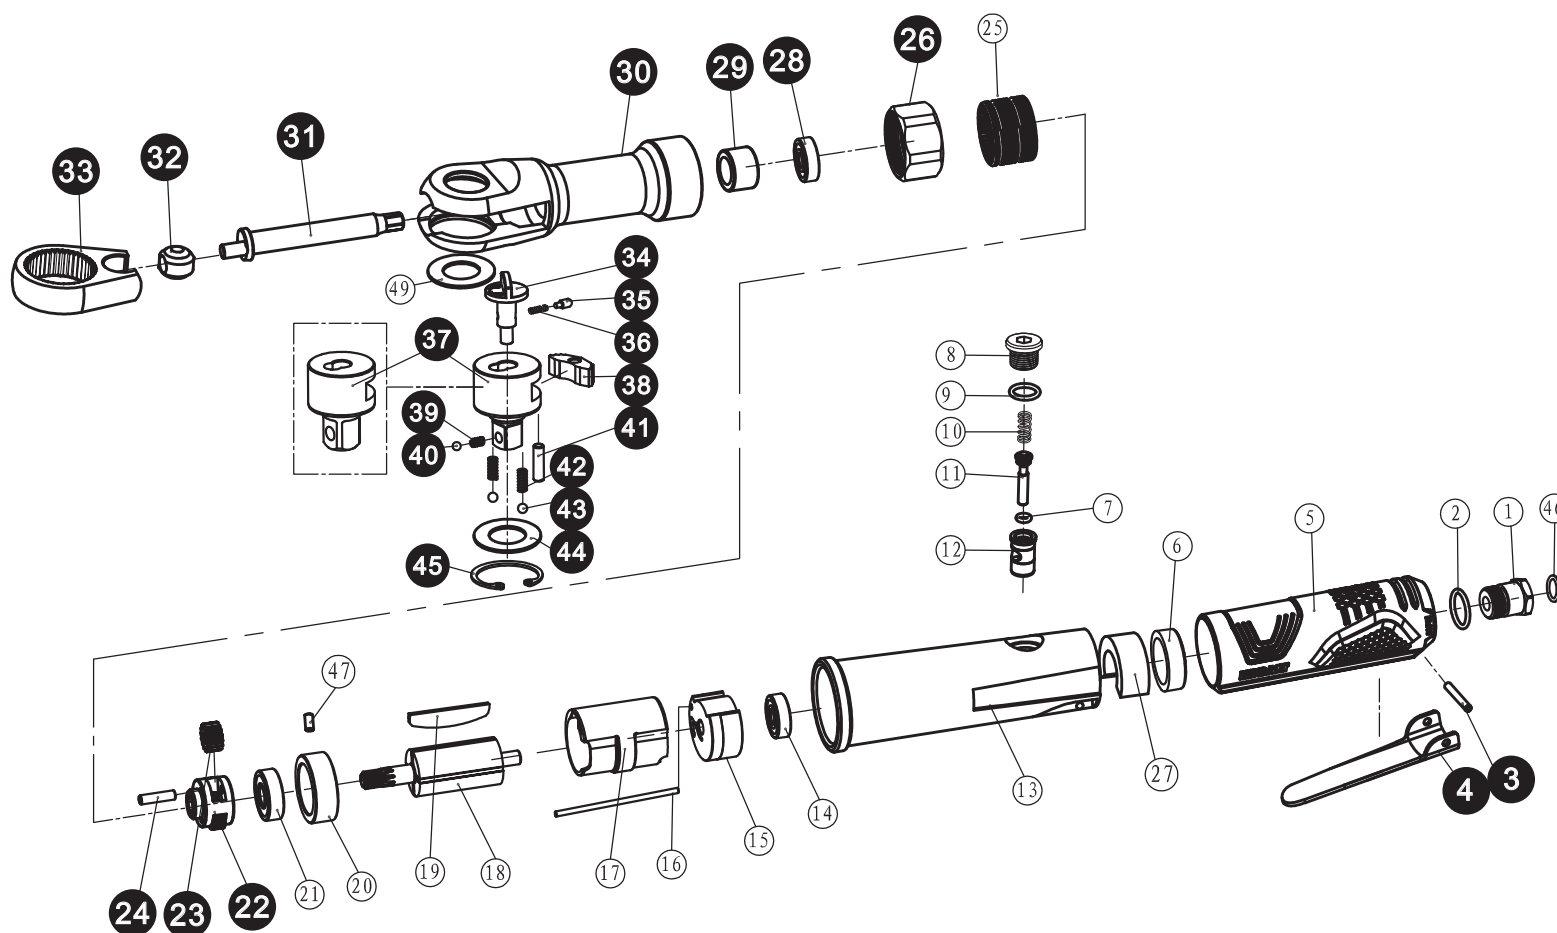

Parts List

PART	Description	QTY
1	Air Inlet	1
2	O-ring	1
3	Spring Pin	1
4	Lever	1
5	Sleeve	1
6	Muffer	1
7	O-ring	1
8	Switch Nut	1
9	O-ring	1
10	Spring	1
11	Switch pin	1
12	Switch pin Sleeve	1
13	Housing	1
14	Bearing	1
15	B-cap	1
16	Alignment pin	1
17	Cylinder	1
18	Rotor	1
19	Blades	4
20	A-cap	1
21	Bearing	1
22	Splinder gears	1
23	Gear	3
24	Alignment Pin	1
25	Ring Gear	1
26	Connecting Nut	1
27	Muffer	1
28	Bearing	1
29	Needle Bearing	1
30	Head Housing	1
31	Shaft	1
32	Shaft Pivot Nut	1
33	Ratchet Yoke	1
34	R/F Knob	1
35	Pin	1
36	Spring	1
37	Ratchet Head	1
38	Ratchet Pawl	1
39	Spring	1
40	Steel Ball	1
41	Pin	1
42	Spring	1
43	Steel Ball	2
44	Thrust Washer	1
45	Retainer Spring	1
46	Metal Filter	1
47	Pin	1
48	Washer	1

REPLACEMENT PART	DESCRIPTION	QTY
3	Spring Pin	1
4	Lever	1
22, 23, 24	Switch Pin Assembly	1
26, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45	Head Assembly	1

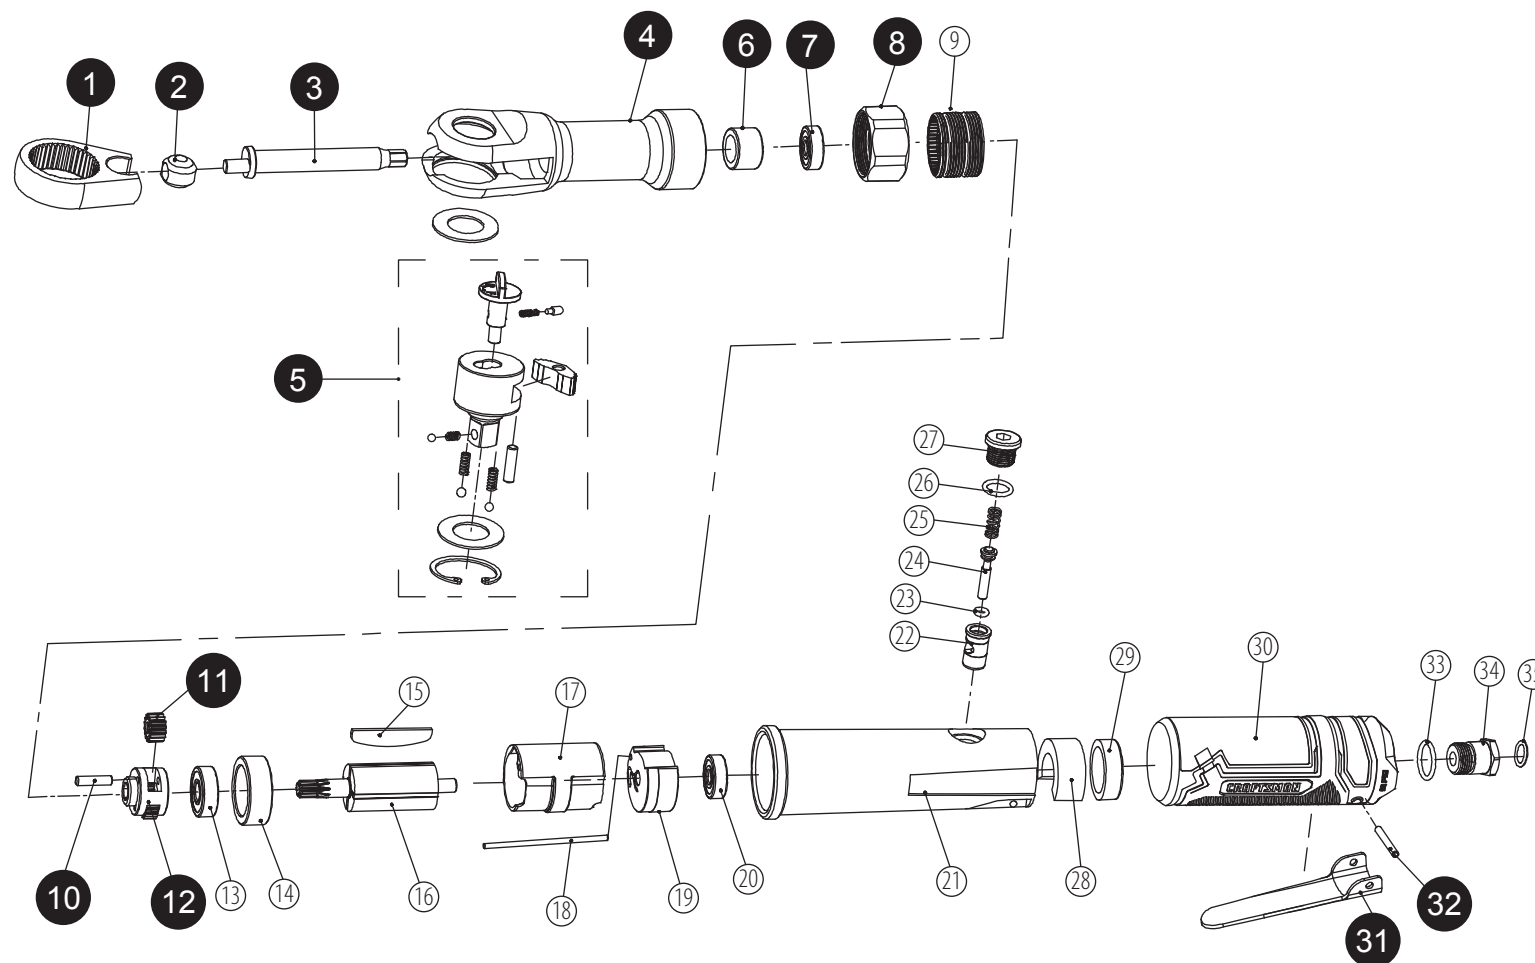

Parts List

Part	Description	Qty
1	Ratchet Head	1
2	Shaft Pivot Nut	1
3	Shaft	1
4	Head Housing	1
5	Ratchet Assembly	1
6	Needle Bearing	1
7	Bearing	1
8	Connecting Nut	1
9	Ring Gear	1
10	Alignment Pin	1
11	Gear Housing	1
12	Splined Gears	1
13	Bearing	1
14	A-Cap	1
15	Blades	4
16	Rotor	1
17	Cylinder	1
18	Alignment Pin	1
19	B-Cap	1
20	Bearing	1
21	Housing	1
22	Switch Pin Sleeve	1
23	O-ring	1
24	Switch Pin	1
25	Spring	1
26	O-ring	1
27	Switch Nut	1
28	Muffler	1
29	Muffler	1
30	Sleeve	1
31	Lever	1
32	Spring Pin	1
33	O-ring	1
34	Air Inlet	1
35	Metal Filter	1

REPLACEMENT PART	DESCRIPTION	QTY
1, 2, 3, 4, 5, 6, 7, 8	Head Assembly	1
10, 11, 12	Switch Pin Assembly	1
31	Lever	1
32	Spring Pin	1