



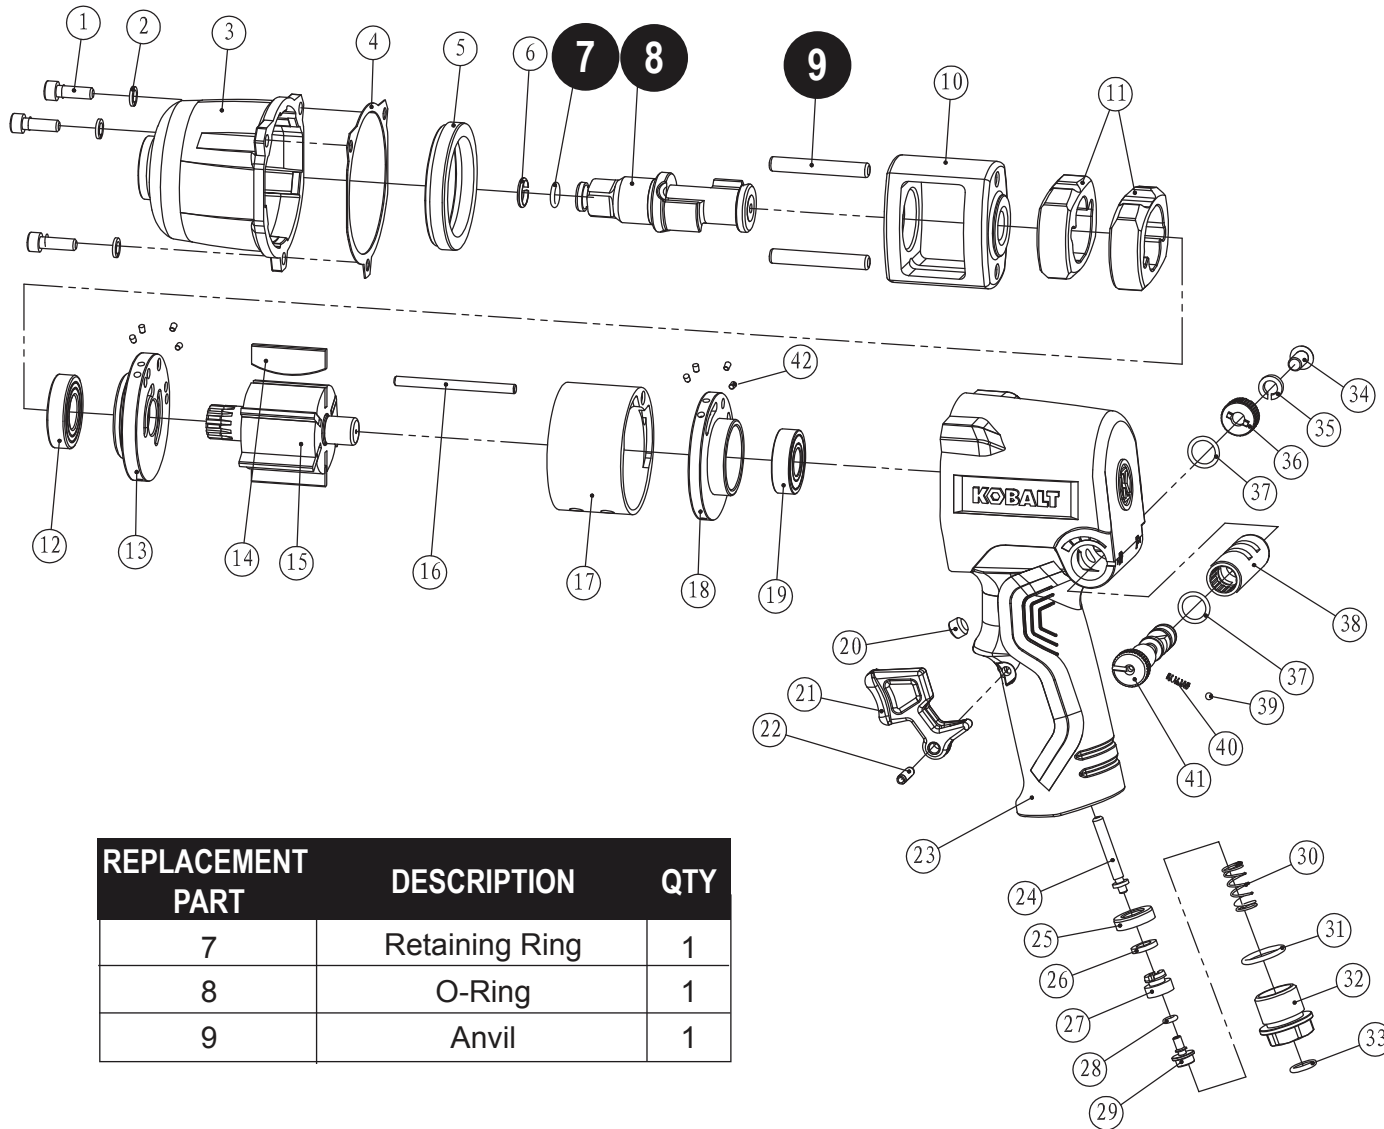

REPLACEMENT PART	DESCRIPTION	QTY
7	Retaining Ring	1
8	O-Ring	1
9	Anvil	1

PART	Description	QTY
1	Screws	3
2	Lock Washer	3
3	Front Cover	1
4	Gasket	1
5	Spacer	1
6	Retaining Ring	1
7	O-ring	1
8	Anvil	1
9	Hammer Pin	2
10	Hammer Cage	1
11	Hammer	2
12	Bearing	1
13	A-Cap	1
14	Rotor Blade	6
15	Rotor	1
16	Alignment Pin	1
17	Cylinder	1
18	B-Cap	1
19	Ball Bearing (B-Cap)	1
20	Set Screw NPT1 16 x 6	1
21	Trigger	1
22	Trigger Pin	1
23	Housing	1
24	Air Inlet Pin	1
25	Intake Washer	1
26	Seal	1
27	Top Intake Valve	1
28	O-ring	1
29	Bottom Intake Valve	1
30	Spring	1
31	O-ring	1
32	Air Inlet Connector	1
33	Metal Filter	1
34	Screw	1
35	Lock Washer	1
36	Forward / Reverse / Speed Adjustment Nut	1
37	O-ring	2
38	Air Bushing	1
39	Ball Bearing	1
40	Spring	1
41	Forward / Reverse / Speed Adjustment	1
42	Pin	8

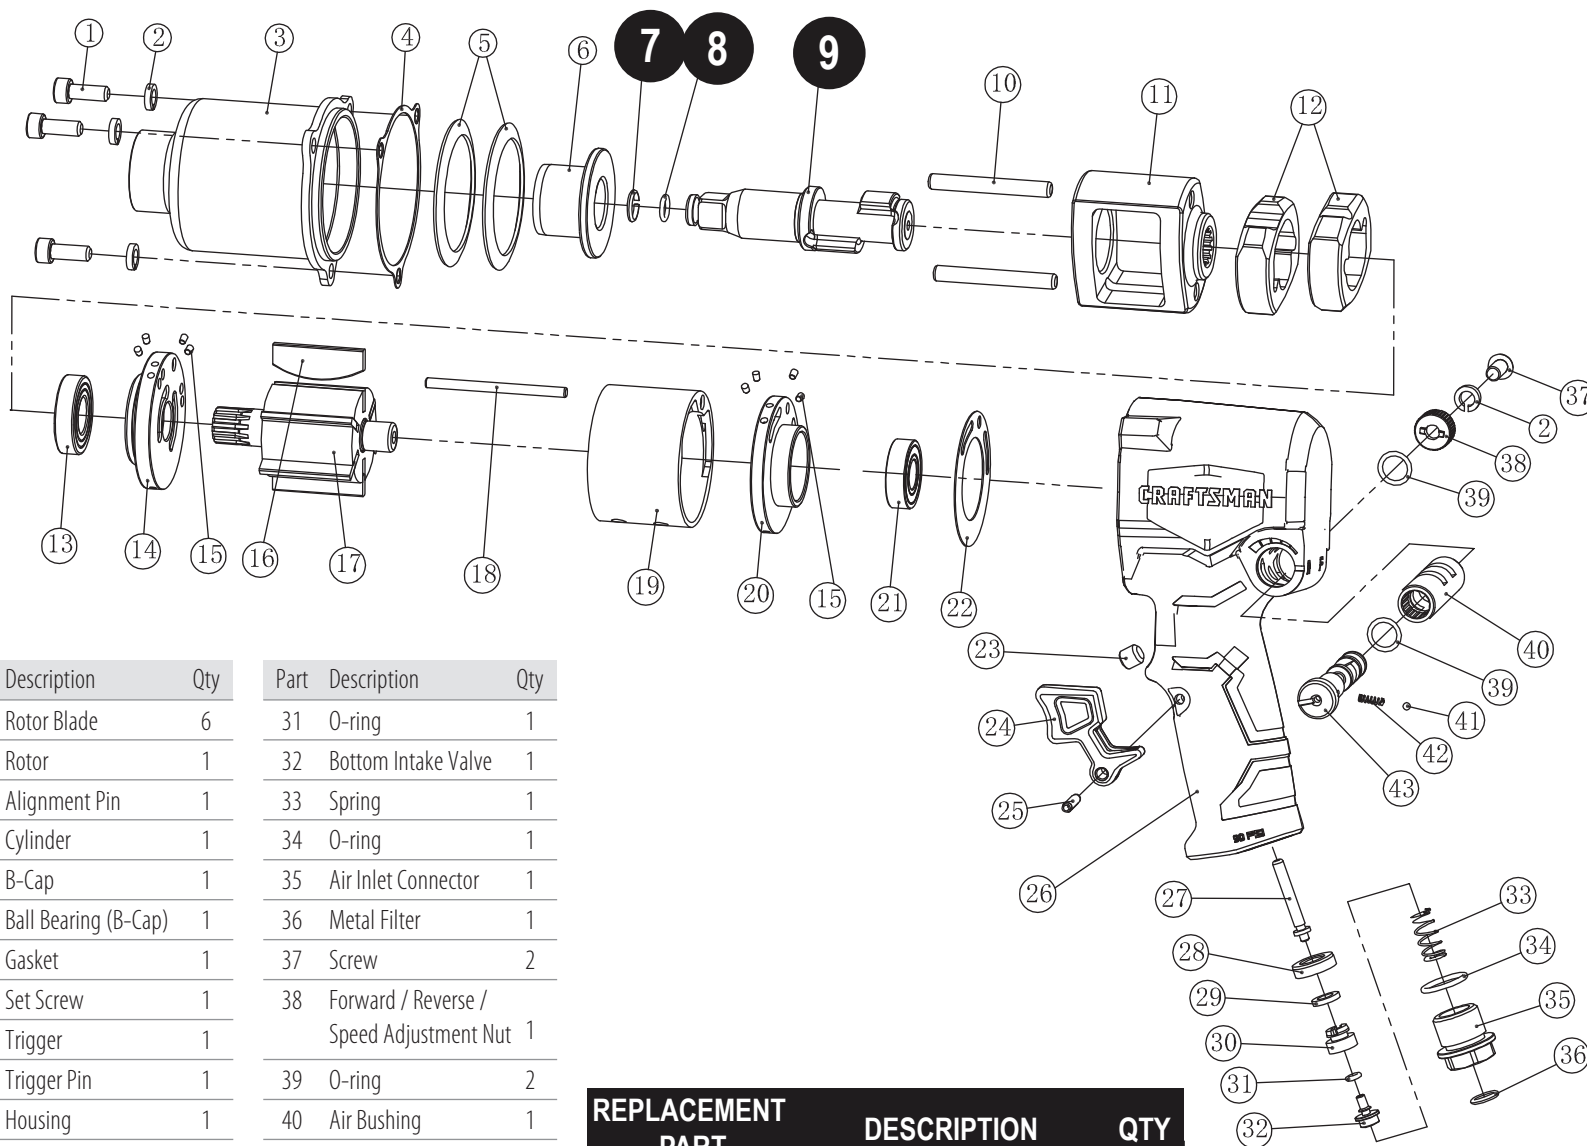

Parts List

Part	Description	Qty
1	Screws	3
2	Lock Washer	4
3	Front Cover	1
4	Gasket	1
5	Spacer	2
6	Anvil Bushing	1
7	Retaining Ring	1
8	O-ring	1
9	Anvil	1
10	Hammer Pin	2
11	Hammer Cage	1
12	Hammer	2
13	Bearing	1
14	A-Cap	1
15	Pin	8

Part	Description	Qty
16	Rotor Blade	6
17	Rotor	1
18	Alignment Pin	1
19	Cylinder	1
20	B-Cap	1
21	Ball Bearing (B-Cap)	1
22	Gasket	1
23	Set Screw	1
24	Trigger	1
25	Trigger Pin	1
26	Housing	1
27	Air Inlet Pin	1
28	Intake Washer	1
29	Seal	1
30	Top Intake Valve	1

Part	Description	Qty
31	O-ring	1
32	Bottom Intake Valve	1
33	Spring	1
34	O-ring	1
35	Air Inlet Connector	1
36	Metal Filter	1
37	Screw	2
38	Forward / Reverse / Speed Adjustment Nut	1
39	O-ring	2
40	Air Bushing	1
41	Ball Bearing	2
42	Spring	1
43	Forward / Reverse / Speed Adjustment	1

REPLACEMENT PART	DESCRIPTION	QTY
7	Retaining Ring	1
8	O-Ring	1
9	Anvil	1