


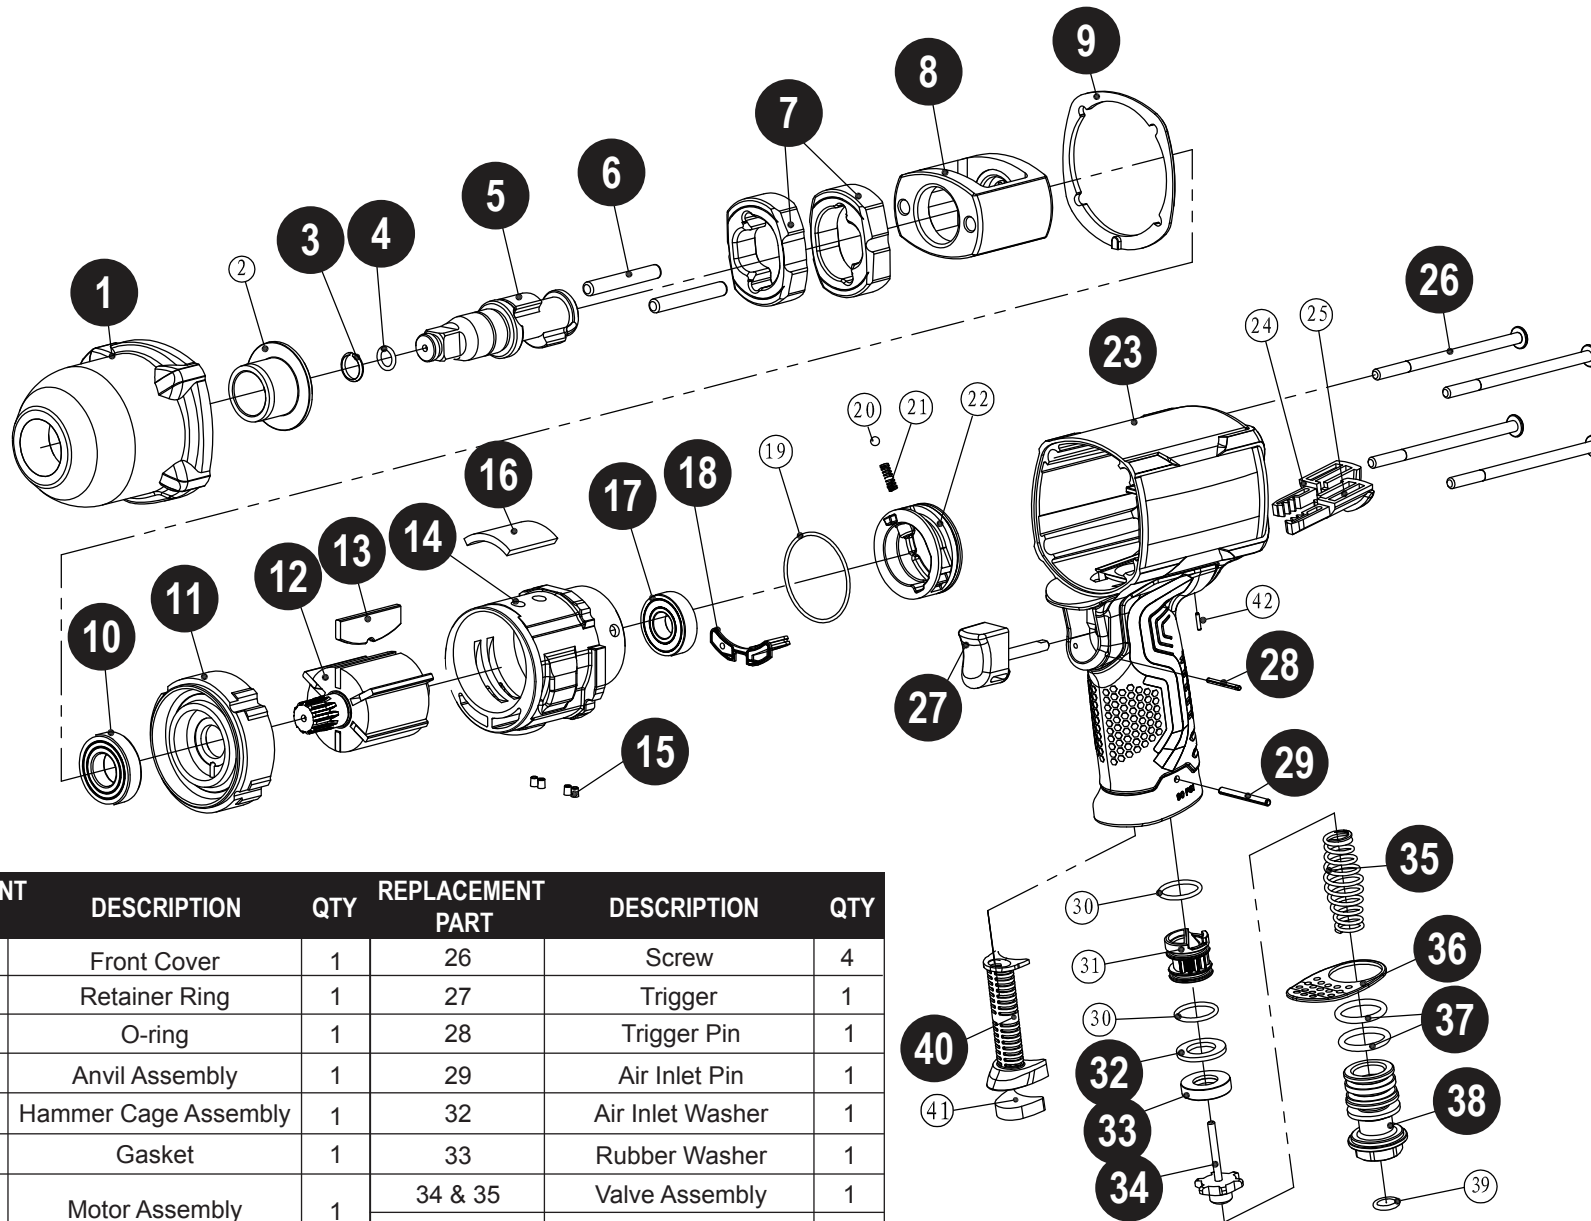

REPLACEMENT PART	DESCRIPTION	QTY	REPLACEMENT PART	DESCRIPTION	QTY
1	Front Cover	1	26	Screw	4
3	Retainer Ring	1	27	Trigger	1
4	O-ring	1	28	Trigger Pin	1
3,4,5	Anvil Assembly	1	29	Air Inlet Pin	1
6,7,8	Hammer Cage Assembly	1	32	Air Inlet Washer	1
9	Gasket	1	33	Rubber Washer	1
10,11,12,13,14,15,16,17	Motor Assembly	1	34 & 35	Valve Assembly	1
18	Gasket	1	36	Exhaust Cover	1
23	Housing	3	37 & 38	Air Inlet Assembly	1
			40	Plastic Muffler	1

PART	Description	QTY
1	Front cover	1
2	Anvil bushing	1
3	Retainer Ring	1
4	O-ring	1
5	Anvil	1
6	Hammer Pin	2
7	Hammer	2
8	Hammer cage	1
9	Gasket	1
10	Ball bearing (A-cap)	1
11	A-cap	1
12	Rotor	1
13	Rotor Blade	6
14	Cylinder	1
15	Plug	4
16	Muffler	1
17	Bearing	1
18	Gasket	1
19	O-ring	4
20	Ball Bearing	1
21	Spring	1
22	Speed Regulator	1
23	Housing	3
24	Forward button	1
25	Reverse button	1
26	Screw	4
27	Trigger	1
28	Trigger pin	1
29	Air Inlet Pin	1
30	O-ring	2
31	Valve	1
32	Washer	1
33	Rubber Washer	1
34	Air inlet Valve	1
35	Spring	1
36	Exhaust Cover	1
37	O-ring	2
38	Air Inlet Connector	1
39	Metal Filter	1
40	Plastic muffler	1
41	Scotch Brite muffler	1
42	Pin	1